

Instruction / Installation Sheet Mini Rough-In Box with Brush Plate Part # 45-0007


- This product is designed for use with low voltage cables ONLY.
- DO NOT run or pull a TV cord or other electrical cords inside the wall.
- It is a violation of the National Electric Code (NEC) to run power cords or extension cords behind the wall.

Tools Needed

Philips Head Screw Driver
Hammer

Installation

1. First determine the location for the Mini Rough-In Box with Brush Plate
2. Remove brush plate cover from the mini rough-in box
3. Nail box onto the stud during rough-in phase and run cable through the box
4. After drywall is installed cut a 1.70" x 1.70" hole in the install location
5. Run cable through brush pass-through opening
6. Place brush plate back onto the rough-in box

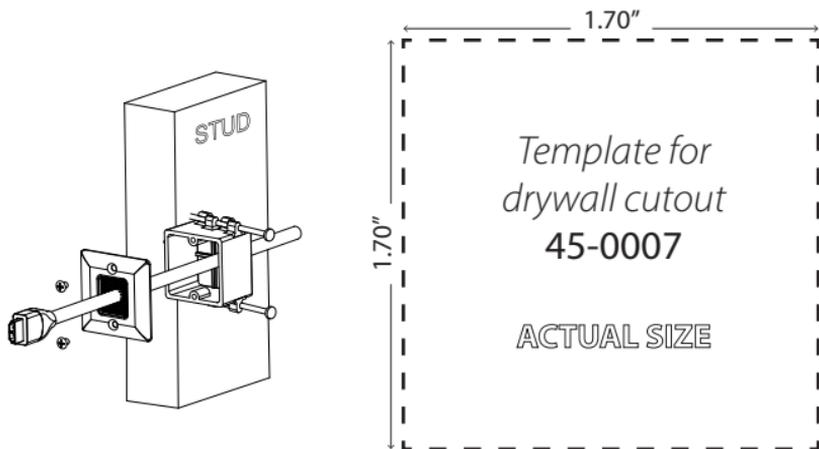

Caution:

- Never install low voltage wiring during lightning storms.
- Never touch un-insulated wires or terminals unless the wire has been disconnected at its network interface.
- Use caution when installing or modifying data or telecommunication lines.
- DO NOT alter, change, or disconnect existing telecommunication wires if you are unsure of their purpose or function.
- It is NOT recommended to install this product in close proximity to an electrical service panel to prevent interference from electrical current.

Important Instructions:

- Read and understand all instructions.
- Do not use this product near water, for example near bath tub, wash bowl, kitchen, sink, or laundry tub, in a wet basement, or near a swimming pool.
- SAVE THESE INSTRUCTIONS.